

Sport MP3 Player



APPMP34GBB/MP34GBR/MP34GBP
USER GUIDE

CONTENTS

Chapter 1. Introduction and product description

- 1.1 Overview of the product.
- 1.2 Features.

Chapter 2. Package contents

Chapter 3. Specifications

Chapter 4. Installation and configuration guide

- 4.1 Before installing.
- 4.2 Shapes and Keys
- 4.3 Instructions for use
- 4.4 Basic Operation
- 4.5 USB and Charging
- 4.6 LED indicator
- 4.7 Upgrade Player Driver
- 4.8 Formatting the moving disk
- 4.9 Common Problems and Troubleshooting

Chapter 5. Obtaining technical support

1. Introduction and product description

Thank you for choosing **MP3 APPMP34GBx**.

1.1 Overview of the product

The MP3 player APPMP34GBx has been developed to be simple, intuitive and easy to use. Small, compact and stylish design so you can enjoy your music in style.

1.2 Features

- Small and elegant design
- USB 2.0 High Speed
- Firmware upgradable
- Supports MicroSD (SDHC compatible)
- Battery 3.7 V 90mAh, audio play about 7 hours.
- Charge time about 2 hours
- Supports format audio: MP3,WMA,WAV,FLAC
- Headphone Output Power: 7mW(R) + 7mW(L) (32Ω)
- Built-in memory: 4Gb
- Supports Windows 98SE/ME/2000/XP/7 or later.
- Unit weight : 13 g

2. Package contents

The following contents should be found in your box:

- **APPMP34GBx**
- Quick Installation Guide.
- Earphone
- USB Cable

Note:

Make sure that the package contains the above items. If any of the listed items are damaged or missing, please contact your distributor.

3. Specifications

Model Name:		Picture1:
APPMP34GBx		
Memory	Built-in memory	4GB
	Memory Extension	MicroSD(SDHC compatible)
General	Solution	Actions3310
	Display	NO screen
	Dimensions	35X35X9.5mm
	Connection Type	USB 2.0 High speed
	FM radio	N/A
	Record	N/A
	Language	N/A
	Built-in Speaker	N/A
	AV-out	N/A
	Firmware upgradable	Yes
	Unit weight	Approx. 13.0g
	Operational environment	Temperature:0℃-40℃,Humidity:RH10%-RH93%
	Storage environment	Temperature:-25℃-55℃,Humidity:RH10%-RH93%
	Battery	Built-in 90mAH Li-polymer
		Audio play about 7 hours (play 128k bit MP3 music, Volume 25)
		Charge time about 2 hours
Audio play	Support format	MP3,WMA,WAV,FLAC
	Play effect	N/A
	Play mode	rotate all, random
	Lyric	N/A
	Frequency Range	20Hz~20kHz
	Headphone Output Power	7mW(R) + 7mW(L) (32Ω) at Max. Volume
	S/N Ratio	>95dB : A weighted
	Sound	Stereo ,L/R
O/S	Supported OS	MSC mode: Windows 98SE/ME/2000/XP or later MTP mode: Windows


Accessory	Standard accessory	Earphone, User Guide, USB Cable
------------------	--------------------	---------------------------------

4. Installation and configuration guide

4.1 Before Installing

1. Do not use the player in exceptionally cold, hot, dusty, damp or dry environments.
2. Do not drop the player while using it.
3. Please charge your battery when:
 - A. The system automatically shuts down and the power is quickly off when you switch on the unit once again
 - B. There is no response if you operate on any key
4. Please do not disconnect power abruptly when the player is being formatted or in the process of uploading or downloading. Otherwise it may lead to program error.
5. When this unit is used as a removable disk, the user shall store or export files in the proper file management operation method. Any improper operation method may lead to the loss of files, for which this company will not be held liable.
6. Please do not dismantle this unit by yourself. If there is any inquiry, please contact the dealer.
7. There will be no separate notice in the case of any change in the functions and performance of this product.

4.2 Shapes and keys

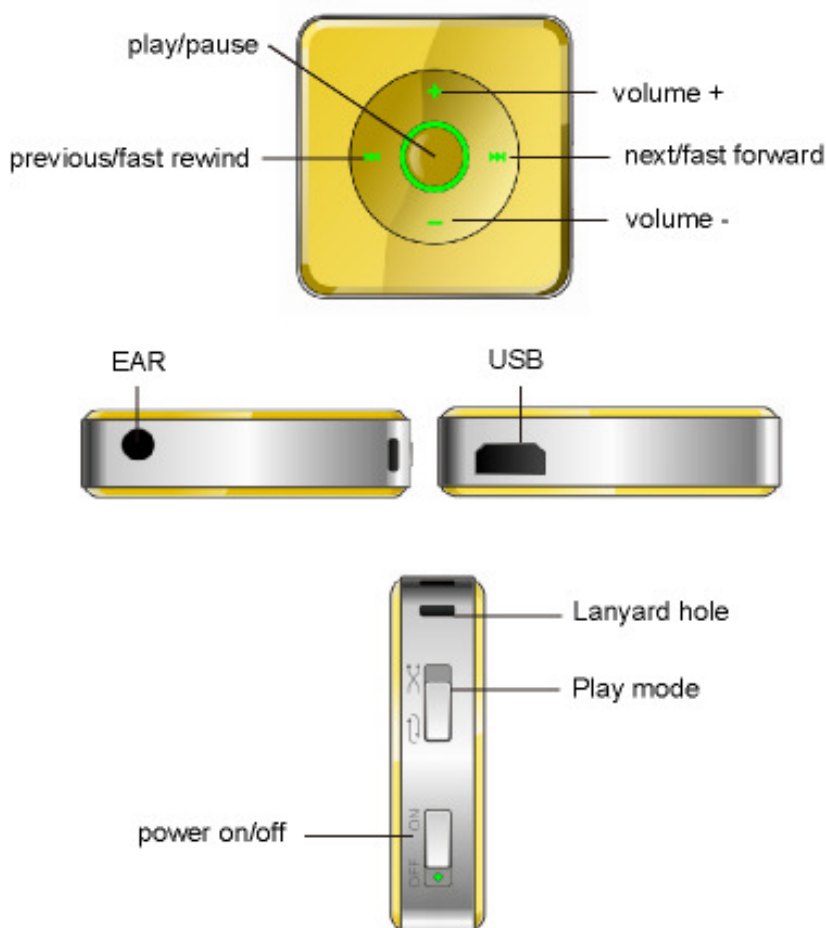

4.3 Instructions for Use

1. Connect the player to computer through USB cable included in packing.
2. Copy WMA or MP3 audio files to the player from computer.
3. Disconnect the player from computer.
4. Put your earphone into ear bud port of the player.
5. Start the player by switch "Power" button from "OFF" to "ON".
6. Short press the "◀/▶" key to choose the PREV/NEXT music.
7. Short press the "+/-" key to control the volume up/down

4.4 Basic Operation

Function	Keys	Operation
Power on		Switch "Power" key to "ON"
Power off		Switch "Power" key to "OFF"
Play/pause		Short press the "Play/pause" key
Volume control		Short press the + to increase the volume while – to reduce the volume
Music switch		Short press the "◀" key to choose the previous music while "▶" to the next
Forward		Hold the "▶▶" key for fast forward
Rewind		Hold the "◀◀" key for fast rewind
Play mode		To switch the play mode the  for repeat and the  for shuffle
Reset		Switch "Power" key to "OFF" and then power on the unit

4.5 USB and Charging

Connecting the computer and data file transmission

Start the computer and then connect the unit with the USB port of the computer using the connection line. In this way you can perform USB power supply or USB data transmission. This unit and the computer can be connected using the USB interface, and can be used as a removable disk. All you do is put your favorite files in the player without the procedures of any third party.

Charging

The player has a built-in rechargeable Lithium battery. It can be charged by computer or DC adaptor. When the player is connected to a computer, the status indicator starts flashing indicating that charging in progress, when the status indicator stops flashing and a sustained light appears, it indicates that the charge has been completed

Output voltage: DC 5V

Output electricity: 200mA

Power adapter is a key component of the portable player, which play a crucial role in keeping the portable player's normal work and protecting your security when using the player, a long-term customer surveys and after-sales service. Practice shows that the malfunction of the portable player in many cases was caused by using inappropriate accessories, in particular the power adapter.

Using the substandard power adapter will shorten the life of the portable player considerably, the voltage instability will seriously affect the normal work of the portable player and bring permanent damage on the player's performance and reliability, using the substandard power adapter will also reduce the vocal quality of the players, shutting down the player when used. In addition, the use of the substandard power adapter will cause combustion and explosion which will affect the safety of the consumers.

4.6 LED indicator

LEDs on the front panel indicate real time status of the player.

Player Status	LED Indication
Playing Music	On for 10 seconds
Pause	Flicker
Pressing Button	Flicker
USB/DC Charging	Flicker
Full Charged	On always
Copying/Deleting Files	Flicker
Low Battery	Flicker (faster)

4.7 Upgrade Player Driver

The firmware is a built-in program, with which you can run various hardware functions. By upgrading the firmware, you can improve or enhance the performance and functions of the player. No upgrading the firmware will not affect the normal operation of the player itself.

The upgrading of firmware may lead to the unit being unable to work properly due to error operation. Please read carefully the instructions for upgrading before doing so.

Operation Procedures

Note: Before upgrading, make sure the player has enough electricity, in order to avoid upgrading failures because of the lack of electricity, which can result in the player not working properly.

4.8 Formatting the Moving Disk

In case that you are unable to read or write in the operation of the player, please use the format tools of Windows to format the player so as to recover the read and write operation of the file system. However, it is seldom the case where the player is unable to read and write.

Generally, you can use the shortcut formatting to delete all files kept in the memory.

Before formatting, please do the following preparatory work:

- Connect the player to the USB interface of the personal computer.
- Back up useful data in the player.

Procedures for operation

1. Connect the player to the USB interface of a personal computer.
2. Double click on the icon of "My Computer" to open the window of My Computer. Select the "Removable Disk".
3. Use the right key of the mouse to single click on the "Removable Disk" to select "Format".
4. Single click on the "Start" button.
5. Pop up the Warning window, and select the "OK" button.
6. Start formatting.
7. After the formatting is over, single click on the "OK" button.
8. To exit formatting, single click on "Close" button.

Caution: Be sure to be careful while formatting, no files will be able to be recovered after formatting.

4.9 Common troubleshooting

1. Products cannot be opened.

Check the battery. If the battery is discharged, please use the provided adaptor to charge the battery and then retry. Based on the discharging state, the charging of full battery needs some time. If there is no product response, please RESET the unit. Note that RESET will be disconnected, but it will not influence the product.

2. No sound.

Check whether the voice is set to "0". If it is so, please control it to your favorite position. Check whether there is any playing source on the product. If there is no playing source on the product, there will be no output of sound.

3. Playing Noise

The damaged music files may utter noise, or discontinued sound output. Check whether the earphone is connected. If there is impurity in the jack/terminal in the earphone, then there is noise.

4. The time for playing the files in the connected memory is shortened.

Compared with the files in the built-in memory, it requires more sources while playing the files on the external memory of MP4. Therefore, if the product playing is respectively saved in the same file in the memory and the outside memory and the built-in memory, the time for playing the former may be shortened.

5. Unable to download files

Make sure that the computer and the player are properly connected.

Check if the memory space of the memory is full.

Make sure that the USB connection lines are not damaged.

6. Some of the music downloaded from the Internet can not be played

The player only supports MP3, WMA, WAV music formats, other formats of music into the format above, then play it again

7. Player appears hang or not boot

Switch Power button to OFF position and then to ON. The player will restart again.

5. Obtaining technical support

While we hope your experience with the **APPMP34GBx** is enjoyable and easy to use, you may experience some issues or have some questions that this user guide has not answered. Please contact your reseller and ask for help firstly, if they could not resolve your issue, please contact our company or send to email to soporte@approx.es.